

# VII. DISASSEMBLY AND ASSEMBLY

## DISASSEMBLY

You can disassemble the scooter into seven pieces: the seat, the front section, the rear section, the rear shroud, the basket, and the batteries. See figure 13. No tools are required to disassemble or assemble your scooter, but keep in mind that the disassembled sections of the scooter take up more floor space than the assembled unit. Always disassemble or assemble your scooter on a level, dry surface with sufficient room for you to work and move around your scooter—about 5 feet (1.5 meters) in all directions. Remember that some scooter components are heavy and you may need assistance when lifting them.



1. Remove the key and ensure that the manual free-wheel lever is in the drive position.
2. Lock the tiller in place by positioning it forward, then pushing the tiller lock knob inward and turning it clockwise 90 degrees. See figure 14.
3. Remove the seat by pulling up on the seat rotation lever, rotating the seat one-eighth of a turn, and lifting the seat up and off of the scooter.
4. Disengage the left battery pack lock by pulling it outward from the scooter. See figure 15.
5. Remove the left battery pack by lifting it straight up and away from the scooter. See figure 15.
6. Repeat steps 4 and 5 for the right battery pack.
7. "Nqqgp'hpqd'cv'y g'dqwqo 'qh'y g'uggtkpi 'eqnwo p  
 """"cpf 'hqrf 'f qy p'vkgmt 'y cpf rg'dctu+0Ugg'hi wtg'350  
 : 0''Ergct'f{ qwt'ect'twpmleqo r rvgnt( 0Hktuv'qcf 'y g'ugcv  
 """"'hqmqy gf 'd{ 'dqj 'dcwgtkgu.'r w'y go 'hwt'y guv'q'y g  
 """"'tget'qh'y g'twpmn0P gzv'qcf 'y g'ueqqvgt'vpk'kpvq  
 """"'y g'twpmly kj 'qpg'r gtuqp'kp'y g'ltqpvc'pf "cpqy gt"  
 """"'r gtuqp'kp'y g'tget'qh'y g'ueqqvgt0  
 ; 0''FQP )'HQTl GV[ QWT'EJ CTl GT#'  
 "  
 "

**NOTE:** When **DISASSEMBLING** the scooter, always remove the **LEFT** battery pack first. When **ASSEMBLING** the scooter, always install the **RIGHT** battery pack first.

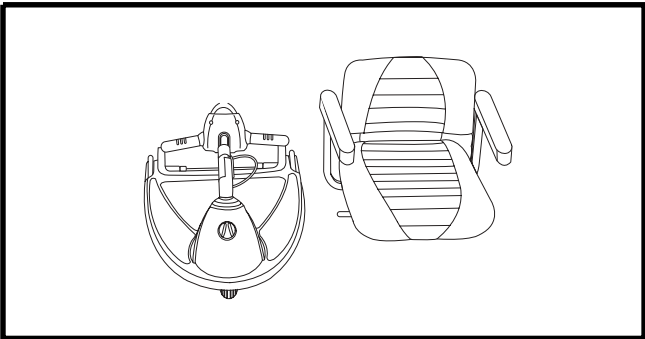


Figure 13. Scooter Components

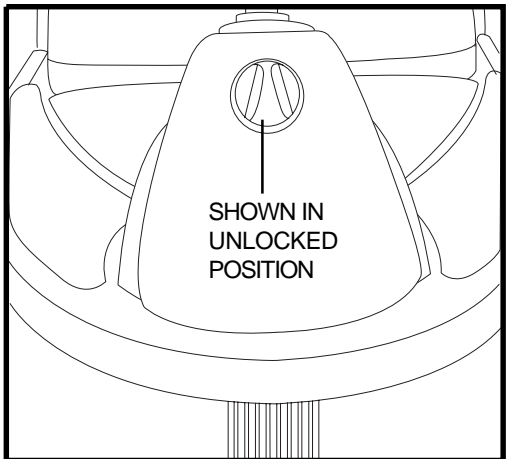


Figure 14. Tiller Lock Knob

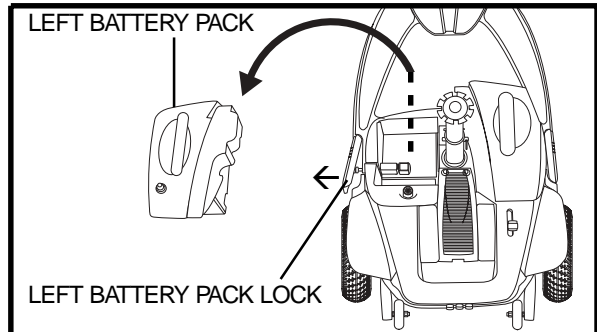


Figure 15. Battery Pack Removal/Installation